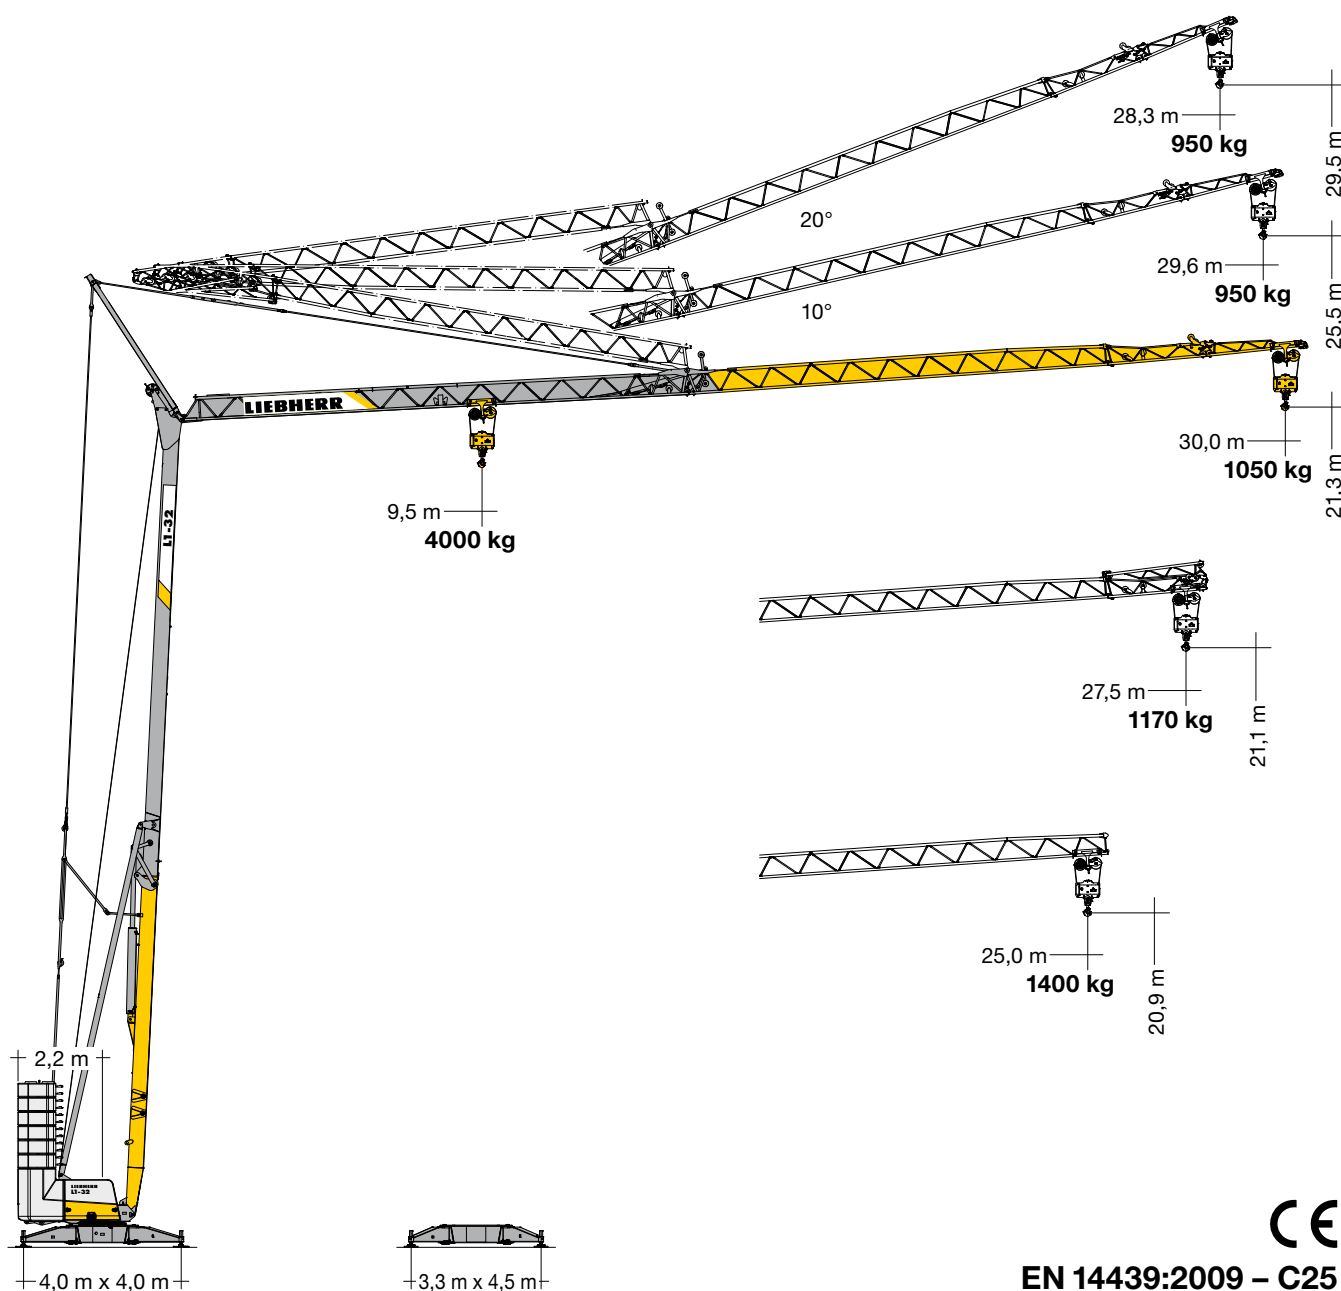


Turmdrehkran L1-32

HÜFFERMANN

Vermietung – Transport & Montage –
Service, Wartung & Ersatzteile

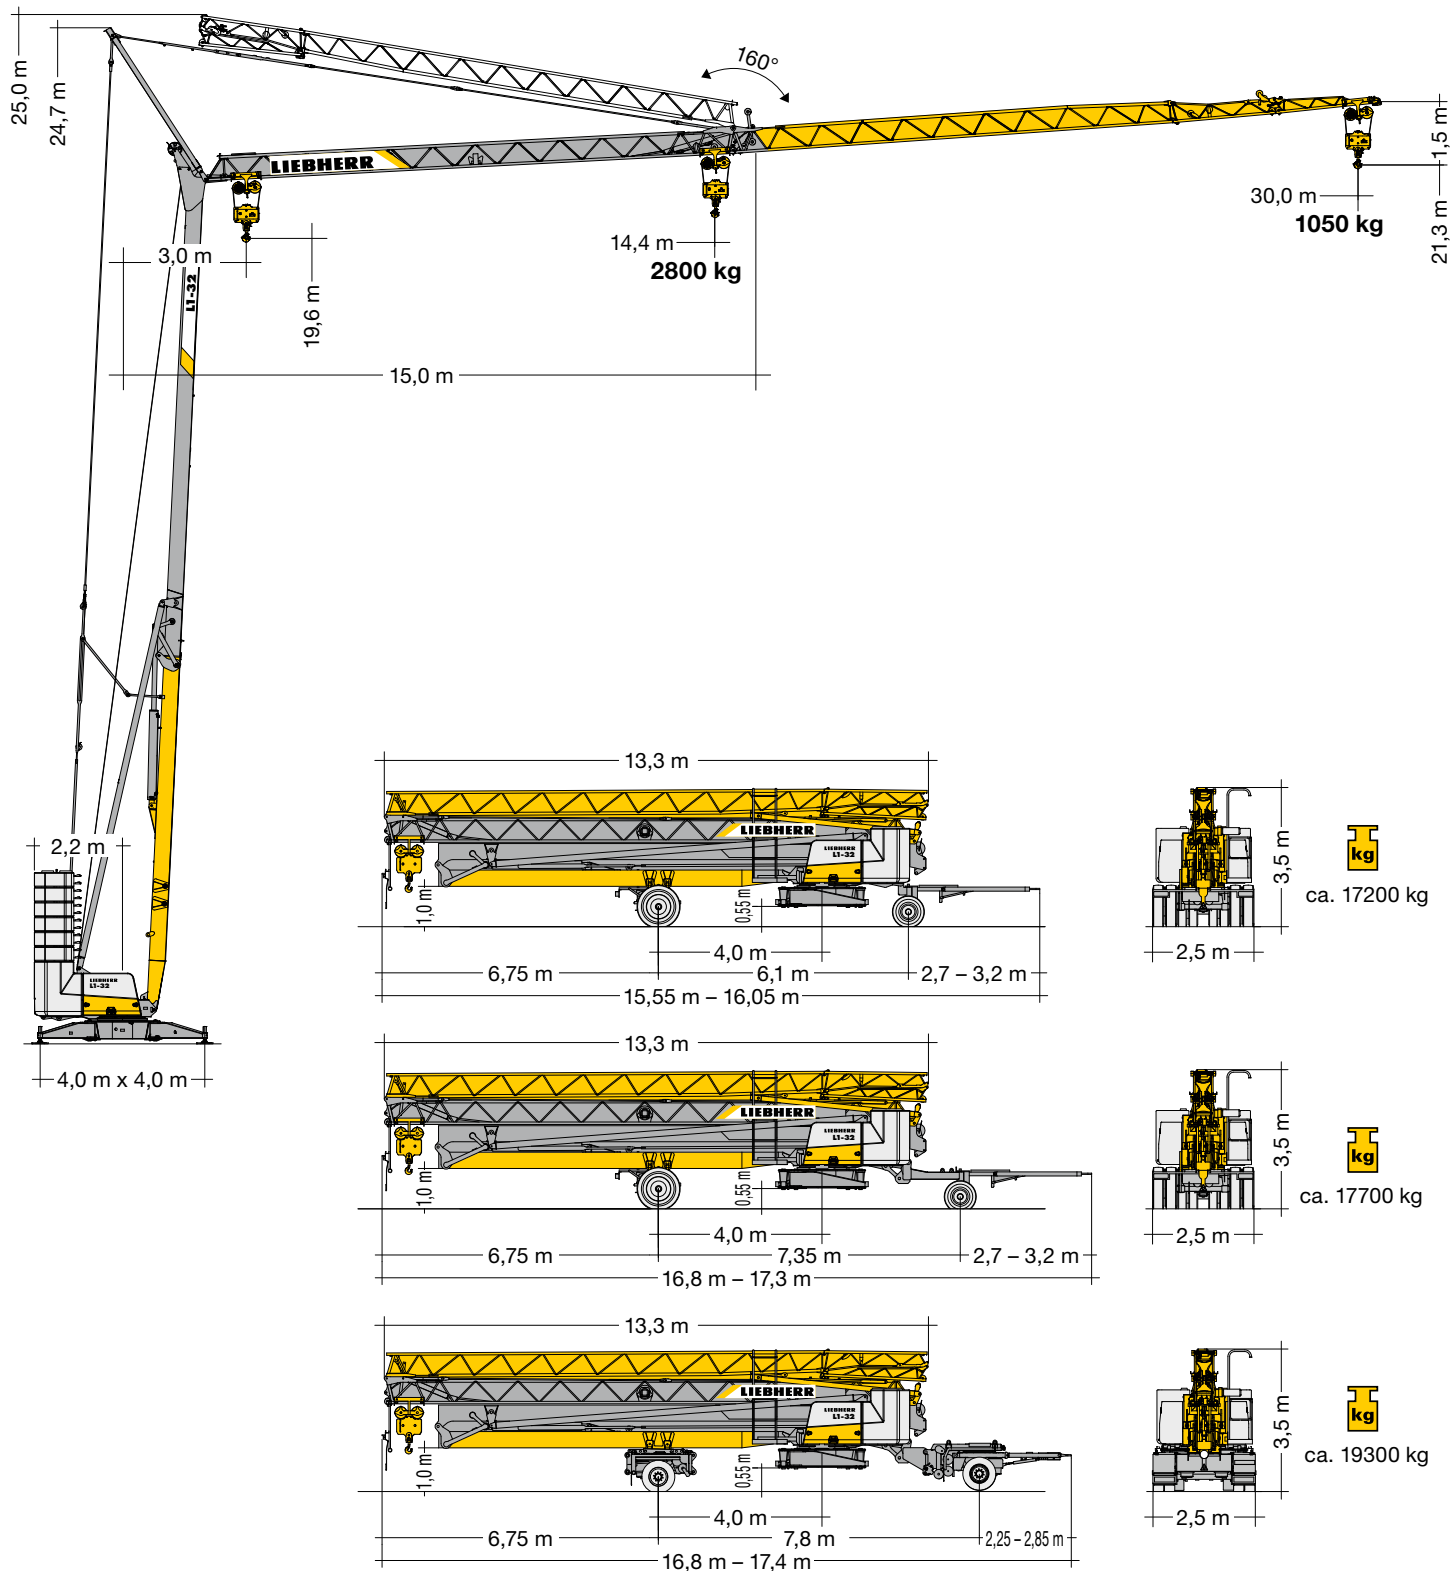
turmdrehkrane@hueffermann.com, www.hueffermann.com



EN 14439:2009 – C25

LIEBHERR

HÜFFERMANN
krandienst



Gewicht

Weight/Poids/Peso/Peso/Pesos/Macca

	17.000 kg¹⁾ 19.000 kg¹⁾ 15.000 kg¹⁾ $r = 2,2 \text{ m}$	10100 kg
--	---	-----------------

m		Auslegersteilstellung 0°/Elevated jib 0°/Flèche inclinée 0°/Braccio inclinato a 0°/ Pluma inclinada 0°/Lança inclinada 0°/Положение стрелы под углом 0°																							
		m/kg																							
	m/kg	10,0	11,0	12,0	13,0	14,0	14,4	15,0	16,0	17,0	18,0	19,0	20,0	21,0	22,0	23,0	24,0	25,0	26,0	27,0	27,5	28,0	29,0	30,0	
30,0	3,0 – 9,5 4000	3750	3350	3030	2770	2540	2470	2350	2180	2030	1910	1790	1690	1600	1510	1440	1370	1300	1240	1190	1160	1140	1090	1050	
27,5	3,0 – 9,5 4000	3770	3370	3050	2780	2560	2480	2360	2190	2050	1920	1800	1700	1600	1520	1440	1370	1310	1250	1200	1170				
25,0	3,0 – 10,0 4000	4000	3600	3250	2970	2730	2650	2520	2340	2180	2040	1920	1810	1710	1620	1540	1470	1400							
14,4	3,0 – 10,6 4000	4000	3840	3460	3150	2880	2800																		



m		Auslegersteilstellung 0° / Elevated jib 0° / Flèche inclinée 0° / Braccio inclinato a 0° / Pluma inclinada 0° / Lança inclinada 0° / Положение стрелы под углом 0°																							15 t 	
		m/kg																								
	m/kg	8,0	9,0	10,0	11,0	12,0	13,0	14,0	14,4	15,0	16,0	17,0	18,0	19,0	20,0	21,0	22,0	23,0	24,0	25,0	26,0	27,0	27,5	28,0	29,0	30,0
30,0	3,0 – 8,7 4000	4000	3860	3460	3130	2860	2630	2430	2370	2260	2110	1970	1860	1750	1650	1570	1490	1420	1350	1290	1240	1180	1160	1140	1090	1050
27,5	3,0 – 8,8 4000	4000	3910	3500	3170	2890	2660	2450	2390	2280	2130	1990	1870	1770	1670	1580	1500	1430	1360	1300	1250	1200	1170			
25,0	3,0 – 9,5 4000	4000	4000	3790	3420	3120	2860	2640	2570	2450	2290	2140	2010	1900	1790	1700	1620	1540	1470	1400						
14,4	3,0 – 10,5 4000	4000	4000	4000	3790	3430	3130	2880	2800																	

m		Auslegersteilstellung 10°/Elevated jib 10°/Flèche inclinée 10°/Braccio inclinato a 10°/ Pluma inclinada 10°/Lança inclinada 10°/Положение стрелы под углом 10°																							
		m/kg																							
		10,0	11,0	12,0	13,0	14,0	14,2	15,0	16,0	17,0	18,0	19,0	20,0	21,0	22,0	23,0	24,0	24,7	25,0	26,0	27,0	27,1	28,0	29,0	29,6
30,0	3,0 – 16,6 2000	2000	2000	2000	2000	2000	2000	2000	2000	1930	1800	1680	1570	1470	1390	1310	1240	1200	1180	1120	1070	1060	1020	970	950
27,5	3,0 – 16,7 2000	2000	2000	2000	2000	2000	2000	2000	2000	1950	1810	1690	1580	1480	1400	1320	1250	1210	1190	1130	1080	1070			
25,0	3,0 – 17,7 2000	2000	2000	2000	2000	2000	2000	2000	2000	2000	1950	1820	1700	1600	1510	1420	1350	1300							
14,4	3,0 – 14,2 2000	2000	2000	2000	2000	2000	2000																		


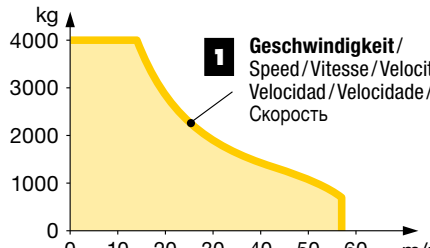
m		Auslegersteilstellung 20°/Elevated jib 20°/Flèche inclinée 20°/Braccio inclinato a 20°/ Pluma inclinada 20°/Lança inclinada 20°/Положение стрелы под углом 20°																						
		m/kg																						
	m/kg	10,0	11,0	12,0	13,0	13,6	14,0	15,0	16,0	17,0	18,0	19,0	20,0	21,0	22,0	23,0	23,6	24,0	25,0	26,0	27,0	28,0	28,3	
30,0	3,0 – 28,3 950	950																						
27,5	2,8 – 26,0 950	950																						
25,0	3,0 – 23,6 950	950																						
14,4	3,0 – 13,6 950	950																						

Antriebe

Driving units/Mécanismes d'entraînement/Meccanismi/Mecanismos/Mecanismos/Приводы

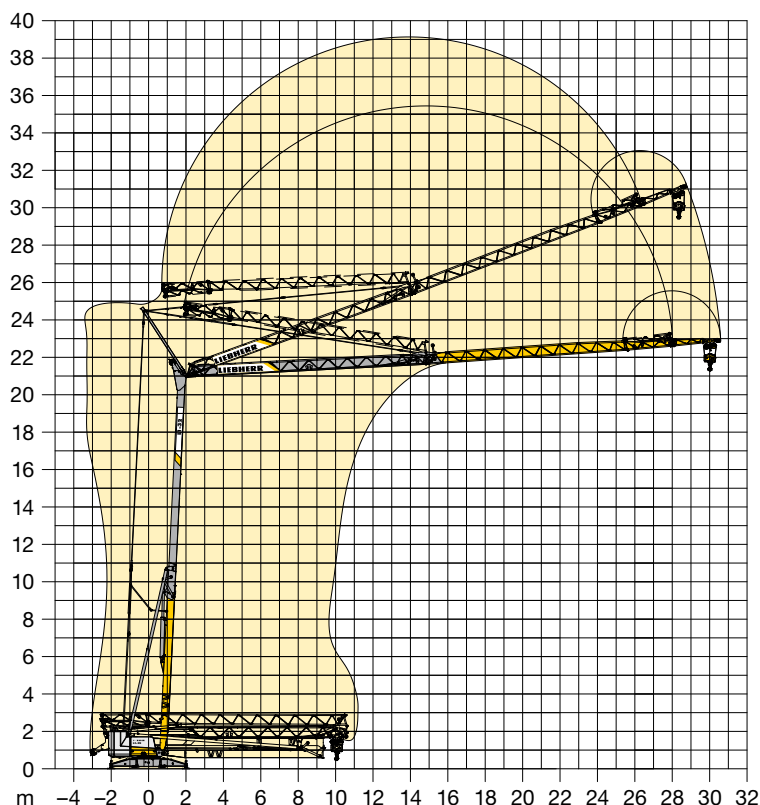
	U/min 0 ↔ 0,8 sl./min tr./min	2,2 kW FU
	0 ↔ 54,0 m/min	2,5 kW FU
	2 min./160°	2,2 kW

BGL		C.0.02.0031
-----	---	-------------

	↔ stufenlos/stepless/régl. continu/ regl. progressiva/sin escalones/ sem degraus/бесступенчатый	kg	m/min
11 kW FU		Geschwindigkeit Speed/Vitesse/Velocità/ Velocidad/Velocidade/ Скорость	
		4000	0 ↔ 14
		700	0 ↔ 57
 1 Geschwindigkeit/ Speed/Vitesse/Velocità/ Velocidad/Velocidade/ Скорость			

	400 – 440 V	50 – 60 Hz	15 kVA
---	-------------	------------	--------

¹⁾ siehe Betriebsanleitung./see instruction manual./voir manuel de service./vedi manuale d'istruzione./ver manual de instrucción./ver manual de instruções./
см. инструкцию по эксплуатации.



Kolli-Liste

Packing List/Liste de colisage/Lista dei colli/
Lista de contenido/Lista de embalagem/Упаковочный лист

							L (m)	B (m)	H (m)	kg
Pos. Item Rep. Voce Pos. Ref. Cant. Cant. Поз. Кол-во	Anz. Qty. Qte. Qta. Cant. Cant. Кол-во									
1	1	Transportachse vorne L1-Adapter /Road transport axle front/Essieux de transport avant/Asse di trasporto anteriore/Eje delantero para transporte/Eixo de transporte dianteiro/Транспортировочная ось, передняя	Tra 100 KY 2 Tra 100 KY 6 Tra 100 KY 6 A				3,09	1,24	1,36	600
							3,09	1,24	1,36	700
2	1	Transportachse vorne, H-Adapter /Road transport axle front, H adapter/Essieux de transport avant, pièce d'adapt. H/Assale anteriore, adattatore per H/Eje de transporte delantero, adaptador H/Eixo de transporte dianteiro, adaptador H/Транспортировочная ось, передняя, адаптер	Tra 100 KY 2 Tra 100 KY 6 Tra 100 KY 6 A				4,30	1,25	1,31	750
							4,30	1,25	1,31	850
3	1	Transportachse vorne m. Zwischenadapter /Road transport axle front w. adapter/Essieux de transport avant a. pièce d'adapt. H/Assale anteriore con adattatore intermedio/Eje de transporte delantero con adaptador intermedio/Eixo de transporte dianteiro com adaptador intermédio/Транспортировочная ось, передняя, с промежуточным адаптером	Tra 100 KY 2 Tra 100 KY 6 Tra 100 KY 6 A				4,30	1,25	1,31	950
							4,30	1,25	1,31	1200
4	1	Transportachse hinten, H-Adapter /Road transport axle behind, H adapter/Essieux de transport arrière, pièce d'adapt. H/Assale posteriore, adattatore per H/Eje de transporte trasero, adaptador H/Eixo de transporte traseiro, adaptador H/Транспортировочная ось, задняя, адаптер	Tra 120 GY 1 und/and/et/ e/y/y GY 1 A				1,60	2,50	1,20	1000
5	1	Transportachse hinten m. Zwischenadapter /Road transport axle behind w. adapter/Essieux de transport arrière a. pièce d'adapt. H/Assale posteriore con adattatore intermedio/Eje de transporte trasero con adaptador intermedio/Eixo de transporte traseiro com adaptador intermédio/Транспортировочная ось, задняя, с промежуточным адаптером	Tra 120 GY 1 und/and/et/ e/y/y GY 1 A				1,75	2,50	1,25	1250
6	1	Transportachse vorne LiTRAX HS-121 /Road transport axle front/Essieux de transport avant/Asse di trasporto anteriore/Eje delantero para transporte/Eixo de transporte dianteiro/Транспортировочная ось, передняя					3,65 – 4,25	2,10	1,15	1900
7	1	Transportachse hinten LiTRAX HS-122 (ohne Lenkung) /Road transport axle behind (without steering)/Essieux de transport arrière (sans direction)/Asse di trasporto posteriore (senza sterzo)/Eje trasero para transporte (sin sistema de dirección)/Eixo de transporte traseiro (sem esterço)/Транспортировочная ось, задняя (без управления)					1,95	2,50	1,10	1600
8	1	Transportachse hinten LiTRAX HS-123 (mit Lenkung) /Road transport axle behind (with steering)/Essieux de transport arrière (avec direction)/Asse di trasporto posteriore (con sterzo)/Eje trasero para transporte (con sistema de dirección)/Eixo de transporte traseiro (com esterço)/Транспортировочная ось, задняя (с управлением)					1,95	2,50	1,10	1700

Änderungen vorbehalten!/Subject to technical modifications!/
Sous réserves de modifications!/Con riserva di modifiche!/
¡Sujeto a modificaciones sin previo aviso!/Sujeto a modificações!/
С правом внесения изменений!

Sämtliche Angaben erfolgen ohne Gewähr./This information is supplied without liability./
Ces renseignements sont sans garantie./Tutte le indicazioni fornite senza garanzia./
Declinamos toda responsabilidad derivada de la información proporcionada./Declinamos
qualquer responsabilidade quanto à informação fornecida./Все данные указаны без обязательств.

TCS-002475-LBC-01 • EN 14439:2009 – A3 • BGL C.0.02.0031 • 04.19

Printed in Germany.

Hüffermann Krandienst GmbH

Ahlhorner Straße 89, 27793 Wildeshausen
Telefon: +49 4431 94555-0

turmdrehkrane@hueffermann.com
www.hueffermann.com